



Winding Drum Residential Elevator

OWNER'S MANUAL





Congratulations on your purchase of a residential elevator from Federal Elevator. We appreciate your business and are confident that the elevator we carefully designed and manufactured will provide you and your family with ease of use for many years.

This Owner's Manual is applicable to our Legacy model, and will provide you with: basic operating procedures, emergency procedures, safety features, warranty and maintenance record. Please review Owner's Manual to learn how to safely use your elevator. Be sure to keep this manual in the machine room so that you are able to reference whenever necessary.

May 2016

All content of this manual is © Federal Elevators




Table Of Contents

- 2 Winding Drum Drawing**
- 3 Car Operating Panel Drawing**
- 4 Hall Station Drawing**
- 5 IMPORTANT NOTES**
- 6 General Specifications**
- 7 Using the Elevator**
- 8 What to do in case of a power failure**
- 9 Emergency Door Opening Inside the Cab**
- 10 Infrared Light Curtain**
- 11 Troubleshooting Tips**
- 12 Warranty**
- 13 Maintenance**
- 14 Notes**
- 15 Maintenance Record**



Winding Drum


The Diagram below is a representation of your unit. Many of the items that are mentioned in this Manual are labelled below for your reference.

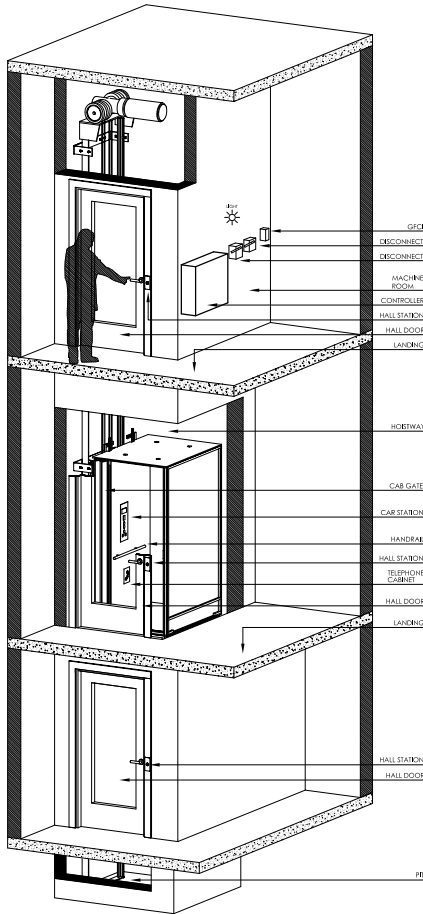



Car Operating Panel

Your Residential elevator will be equipped with a Car Operating Panel which will allow you to operate your elevator.

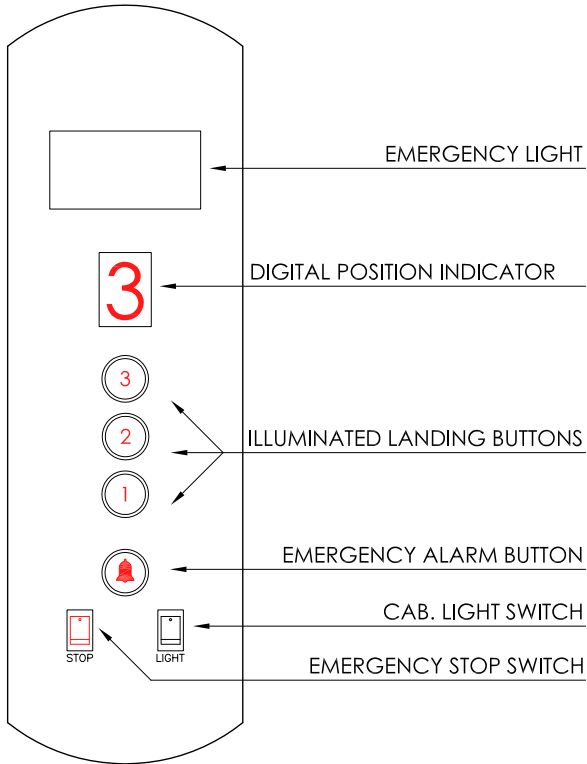


The above drawing represents a 3 stop unit. Your unit could differ from above illustration.



Hall Station Drawing

You will have a Hall station on every level of your home that is serviced by your elevator. The Hall button will illuminate when a call is registered.

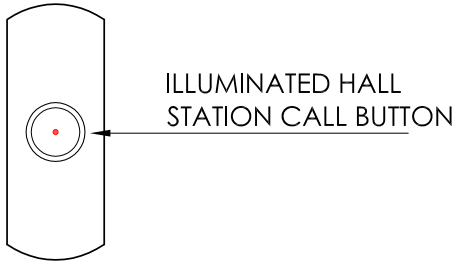

Your unit could differ from above illustration.



IMPORTANT NOTES

This is a private residence elevator as defined in CSA B44/ASME A17.1 safety codes. This elevator is designed for use in a private residence ONLY and not for commercial or public use.

The following shall be observed to ensure safe and reliable operation:

- DO NOT lean on cab doors while inside the cab.
- DO NOT lean on elevator hall doors.
- DO NOT jump up and down inside the cab.
- Children under the age of 16 MUST NOT operate the elevator alone. They MUST HAVE adult supervision while using the elevator.
- Do not exceed the maximum weight that is specified for your elevator.
- Do not use elevator in case of fire.
- If your cab is not equipped with a telephone connected to an outside line, ensure that you have a cell phone with you when using the elevator (especially if you are home alone) in the event of an emergency.
- Always watch your step when entering or exiting the elevator.
- Lock the wheels on your wheelchair while travelling in the elevator.
- Only a trained elevator mechanic shall be responsible for performing maintenance on elevator.



Do not tamper or attempt to fix the Controller as it could result a risk of electric shock or death. The Controller shall only be serviced by a licensed technician.




Specifications

RESIDENTIAL ELEVATOR	
Load Capacity	950 lbs. (431 kg.)
Rated Speed	36 feet per minute (0.18 m/s) (Nominal)
Power Supply NOTE: Amperage may vary depending on individual units.	230 volt, single phase, 30 amps
Drive System	Winding Drum
Standard Cab Sizes	36" x 48" (914.4 mm. x 1219 mm.) 40" x 54" (1016 mm. x 1372 mm.) 36" x 54" (914.4 mm. x 1372 mm.) 42" x 60" (1067 mm. x 1524 mm.) 36" x 60" (914.4 mm. x 1524 mm.) 48" x 60" (1219 mm. x 1524 mm.)
Maximum Travel	35 ft. (10.67 m.)
Cab Door	Manual Accordion Gate (Automatic Accordion Door, Bifold Door, 3 Speed Doors or Scissor Gates optional)
Maximum Number of Stops	6 stops
Pit Depth Required	8" (203 mm.) minimum.
Overhead Clearance	96" (2438 mm.) minimum. This measurement is for standard 8' cab with manual accordion door. Please contact a representative if you are planning on adding a different cab height or cab gate as this measurement may change. Minimum overhead for a bottom drum unit is 96" Minimum overhead for an overhead drum unit is 103"
Control System	Automatic Push Button
Floor Selection	Magnetic Selector
Flooring Material	Plywood (Floor to be finished by customer after elevator is installed)
Control Panel Finish	Stainless Steel (standard) Brass or Antique Bronze (optional)
Hall Station Finish	Stainless Steel (standard) Brass or Antique Bronze (optional)
Motor	2 HP Geared
Cab Panel Finish	Unfinished Maple, Unfinished Oak Veneer, Unfinished MDF or Melamine (standard)
Lighting Supply	110 volt, 60 Hz, 15 amp
Standard Features	<ul style="list-style-type: none"> ■ Automatic Timed ON/OFF Cab Lighting ■ Stainless Steel Illuminated Hall Buttons ■ Digital Floor Indicator in Cab (optional) ■ Emergency Battery Powered Lowering & Lighting ■ Emergency Stop Button in Cab ■ Emergency Alarm Button in Cab ■ Solid Ceiling with Halogen Pot Lights ■ Stainless Steel Handrail ■ Stainless Steel Control Panel in car ■ Electromechanical locks at all door landings (Interlock) ■ Infrared Light Curtain if elevator is equipped with accordion doors or scissor gates





Using the Elevator

1. Call the elevator to your desired floor by pressing the Hall Station Call button. Your call has been registered when the light illuminates.
2. The interlock will energize and allow you to open the hall door once the elevator is at your landing.

 **NOTE: Be aware that the lights in your cab are on a timer. They will turn on once the elevator is called and the hall door has been opened. The lights will automatically shut off 5 minutes after hall and car doors are closed.**

3. If you have manual gates, open the cab gate and enter. If you have automatic gate, enter the cab when it fully opens.
4. If you have manual gates, close the hallway door first and then ensure that the cab gate is fully closed. Automatic doors will close on their own.
5. Choose your desired level by pressing it on the Car Operating Panel.
6. The elevator will stop and the doors will open at your chosen level.
7. If you have manual gates, open them first and then open the hall door. Automatic gates will open on their own, once they do, you are able to open your hall door.
8. Exit the elevator.

 **NOTE: It is important to ensure that you always close the manual gates and hallway doors as the elevator will not register a call if any of the doors remain open.**

 **NOTE: If your cab is not equipped with a telephone connected to an outside line, ensure that you have a cell phone with you when using the elevator (especially you are the only one home) in the event of an emergency.**



What to do in case of a power failure:

1. Remain calm.
2. Use the elevator phone (if applicable) or your cell phone to contact your maintenance provider.
3. Press Emergency Alarm Button on your Car Operating Panel to sound the alarm to alert others nearby that you require assistance while you are waiting for help to arrive.




If the elevator is stopped between floors, DO NOT attempt to exit without the help of an elevator technician. Ignoring this warning could result in serious injury or death.

NOTE: If you open your cab doors and the elevator is level with the landing, you are able to exit by lifting up the interlock pin in the upward direction allowing the lock to manually open. Please refer to the Figure 1.



EMERGENCY DOOR OPENING INSIDE THE CAB

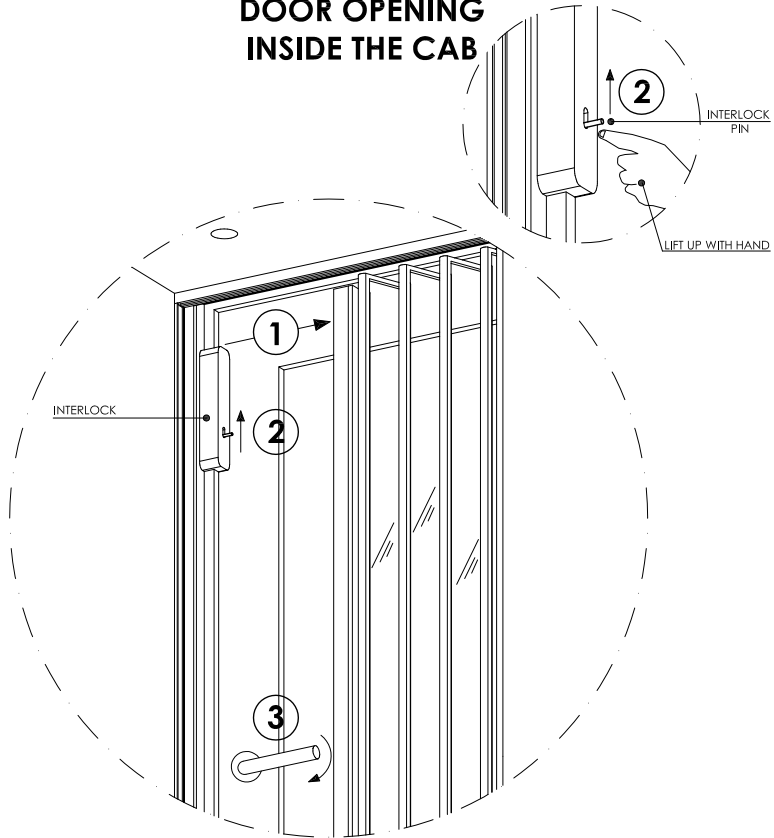

EMERGENCY DOOR OPENING FROM INSIDE THE CAB:

- 1- PULL AND OPEN THE ELEVATOR GATE**
- 2- LIFT UP INTERLOCK PIN**
- 3- OPEN HALL DOOR TO EXIT**

Figure 1



Infrared Light Curtain

Elevators with manual gates will be equipped with an infrared light curtain which is part of the residential elevator safety features. This mechanism runs adjacent to the manual gate and acts as an invisible shield at the entrance of the cab. The elevator will not travel if the path of the lasers are broken as this is considered an unsafe condition. The elevator will resume normal function within 5 seconds once the area is clear.

NOTE: Should you accidentally obstruct the path of the laser while the elevator is moving, it will automatically stop. The elevator will resume travelling 5 seconds after the obstruction has been removed.



Troubleshooting Tips

If your residential elevator is not responding to your call on the hall station, please try the following:

- Check that your manual car gate is securely closed.
- Check that the hall doors at all landings are securely closed.
- Ensure that the Emergency Stop button located on your Car Operating Panel is not in the off position.
- Ensure that both power disconnects in your machine room are in the ON position.


If your elevator is still not responding after completing the troubleshooting tips, contact your maintenance company to schedule a service call.



Warranty

The warranty starts on the date when the elevator was shipped from the Federal Elevator plant. Please refer to your signed contract to confirm the length of time your unit will be covered. We will make good and/or replace, if necessary, any and all defects due to imperfect workmanship which may appear during the warranty period. These defects, and the repairs required, will be solely determined by Federal Elevator upon receiving at its place of business the piece deemed to be defective by the owner.

This warranty does not cover damages caused by normal wear and tear, accident, fire, unauthorized alterations, vandalism, wilful damage, negligence, acts of God, or other like causes. This warranty shall be considered null and void unless the elevator is maintained properly and consistently by a registered elevator mechanic in the province/state where the elevator is located. Such maintenance shall be performed in accordance with Federal Elevator's recommendations and the requirements of the province's acts and regulations.

 **NOTE: Units purchased through one of our recognized Dealers will have the same terms as stated in the above warranty but with a time period of one (1) year ONLY. Customer may arrange for a longer warranty period however, this MUST be done prior to the unit being shipped from the Federal Elevator plant.**



Maintenance

Elevator passenger safety is the result of countless details in the equipment's design, manufacture and installation. After installation, reliable operation and continued assurance of safe operation requires regular maintenance and service to be carried out at least once per year, or more frequently where usage or environment dictates or as required by local jurisdiction. The owner is responsible to ensure regular service and inspections by licensed elevator technicians.

The Residential Elevator must be installed, maintained and serviced by **an authorized FEDERAL ELEVATOR representative ONLY!** Under no circumstances is anyone other than a trained and authorized Federal Elevator Dealer to install, adjust, maintain, service or modify any mechanical or electrical devices on this lift. Failure to follow this warning can result in safety systems being compromised, which can result in serious injury or death. Federal Elevator Systems Inc. accepts no liability for property damage, warranty claims or personal injury, including death, in this circumstance.

If you purchased your elevator through one of our Dealers, please have them fill out the information below for future reference.

FOR OWNER'S RECORDS

Customer Name: _____

Installing Dealer: _____

Dealer's Telephone Number: _____

Date Installed: _____

Serial/F Number: F- _____



Maintenance Record

Please remove and add this page to the Controller in your Machine Room so that you are able to keep track of your service visits. It is recommended that the owner update the Maintenance Record after each service call.

DATE	TIME	REASON FOR CALL	COMMENTS	MAINTENANCE PROVIDER COMPANY	TECHNICIAN'S NAME



Maintenance Record continued

DATE	TIME	REASON FOR CALL	COMMENTS	MAINTENANCE PROVIDER COMPANY	TECHNICIAN'S NAME



Notes



Notes



1090 Lorimar Drive
Mississauga, ON L5S 2A1

Tel 905.458.4015

Toll 1.888.785.5438

Fax 905.670.0017



Linked 

www.federalelevator.com